


Securi-T 90 Degree Retrofit Expansion Joint

Installation Detail

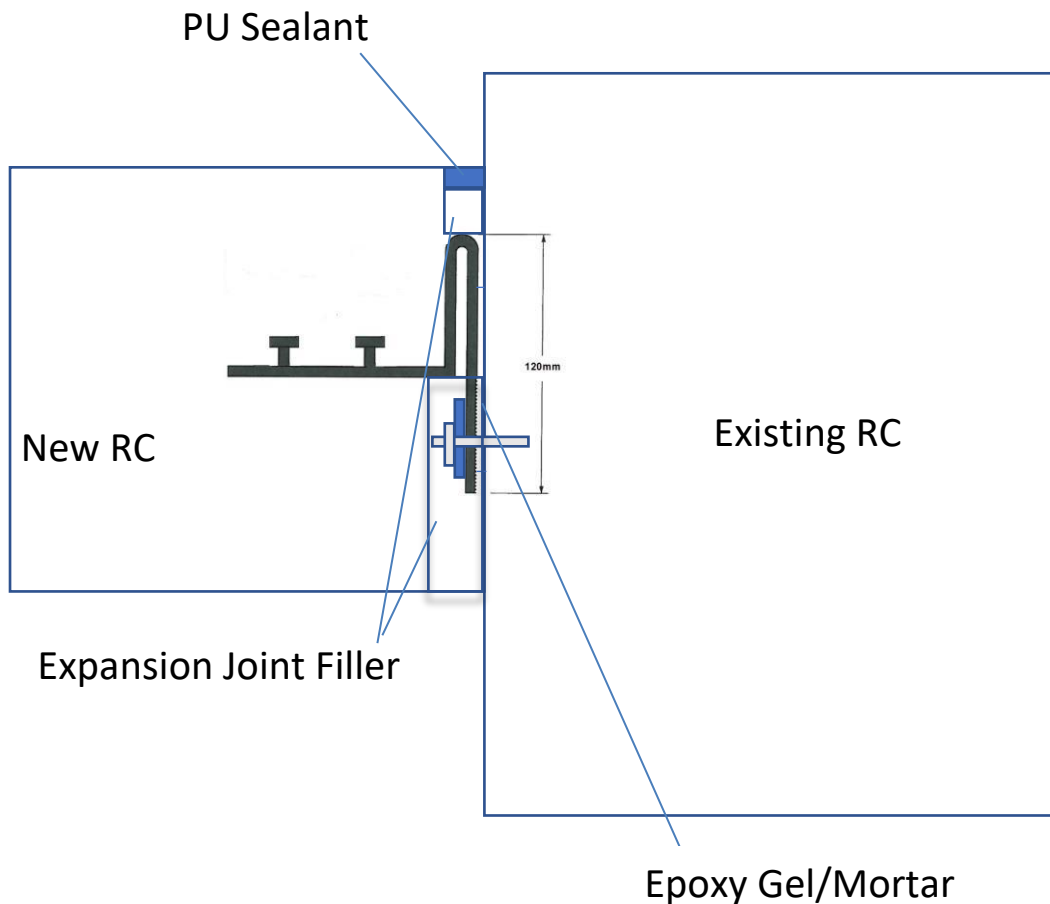

Installation of Joint:

- Epoxy gel/mortar applied to surface of existing concrete
- Waterstop secured and sealed to existing concrete using stainless steel batten typical dimensions 30 x 5mm pre-drilled and stainless steel anchor 60 x 6mm
- Expansion filler board applied above and below joint
- Joint sealed after new concrete placed with suitable PU sealant